

Make*Cuisine*

Inspire

C O L L E C T I O N



User's manual

Version 1.0

KETTLE | LOFT

! IMPORTANT SAFEGUARDS

**PLEASE READ CAREFULLY AND UNDERSTAND THESE INSTRUCTIONS.
ALWAYS TAKE CARE FOR YOUR SAFETY WHEN USING ANY APPLIANCE.**

- Check that the mains voltage corresponds to the kettle specifications before starting it. If this is not correct, do not use the kettle and contact the supplier.
- To avoid risk of electric shock, do not immerse or allow water or other liquids to enter the cables, plug or power supply base.
- Do not leave the kettle unattended while in operation.
- Do not use the kettle if it is damaged or if the cord or plug is broken or frayed.
- If the power cord or kettle is damaged, it must be repaired or replaced. Do not use the kettle in this condition.
- The use of accessories other than those supplied with the equipment and not authorized by the manufacturer may cause injury.
- Do not use the kettle outdoors.
- Due to hot parts and potential hazards, the appliance is not suitable for use by children under 8 years of age.

When switched off, keep the device and the power cord out of the reach of children. Children over 8 years of age must be supervised by an adult at all times when using or cleaning the appliance. This appliance is not a toy!

- During water filling, during cleaning or when not in use, leave the kettle off and disconnect the plug from the power supply base.
 - When refilling the water, avoid getting the bottom of the kettle wet.
- Also, before connecting the power base, wipe off any water droplets that may have remained underneath with a dry cloth to avoid the risk of electric shock or short circuit.
- Water should not exceed the maximum level indicated, it could spill when boiling, causing damage.
 - Use the kettle on stable and completely horizontal surfaces.
 - Tripping over the power cord may cause an accident.

It is recommended that, when boiling water and to prevent it from tipping over and causing burns, always keep the kettle close to the base and with the cord tucked away from the wall.

- This appliance reaches very high temperatures, to avoid burns, be sure to hold the kettle lid before pouring water.
- **WARNING:** When heating, do not open the kettle lid or shake the kettle, as you may burn yourself. **DO NOT** use the kettle to heat water without the lid on and be careful not to press the lid release button inadvertently when pouring water.

! IMPORTANT

- To avoid electrical hazards, do not allow the kettle or power cord to be immersed in water or other liquids.
- In rooms with temperatures below 0 degrees Celsius, do not leave the kettle permanently connected to the power supply.

Otherwise, the automatic temperature control will restart the heating, eventually damaging the kettle.

- If the power cord is broken or damaged, it must be replaced. Do not use the kettle in this state.
- Do not allow the kettle to run without water.

When empty, be sure to disconnect it from the power supply

- When cleaning the kettle, remove the base, clean the water in both the kettle container and the base before using it again.
- The kettle can only be used with the base supplied.
- This product is for heating water only. Do not heat other types of liquids or add solubles such as coffee, soup, milk and other substances to the water in the kettle.
- When boiling water, do not open the kettle lid
- When pouring freshly boiled water, be very careful and pour slowly to avoid splash burns.
- It is recommended to use the kettle base in grounded sockets.
- When disconnecting the kettle, do not do so by pulling on the cord. Disconnect the plug from the wall socket with your hands.
- Do not touch the kettle with wet hands.
- Be sure to turn off the power switch before removing the kettle from the base.
- If the kettle is overfilled, boiling water may splash out.
- Detailed information on how to clean the kettle can be found in the **Cleaning section**.
- This kettle is designed for domestic use such as:
 - Private apartments, houses and villas.
 - Staff kitchen areas for retail, office and other work environments.
 - Use by customers in hotels, motels and other residential settings.
 - Bed & Breakfast type hostels.
- This device **MUST NOT** be used in industrial and/or professional environments, such as Bars, Restaurants, etc. Use in such environments will void the warranty
- Do not use the kettle near or on hot surfaces.
- Never use this kettle near bathtubs, showers, sinks, faucets or other containers of water.
- Be sure not to cover the kettle or put anything over it.

IMPORTANT

- The surface of the base and kettle may have residual heat after use. Do not touch them. Also avoid getting water on them or on the plug.
- **WARNING:** Place the lid so that the steam does not go in the direction of the kettle handle to avoid burns to the hands.
- Make sure the body of the kettle never comes into contact with flammable materials, such as curtains, fabrics, etc. and the power cord and plug also never come into contact with the hot parts of the kettle.
- The kettle is not designed for use with an external timer or separate remote control system
- No liability will be accepted for damage caused due to non-compliance with these instructions or improper use of the kettle.




Please keep the instructions for future reference.

CONTENTS

- INTRODUCTION
- INSTRUCTIONS FOR USE
- CLEANING INSTRUCTIONS
- TECHNICAL SPECIFICATIONS
- TROUBLESHOOTING

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE DEVICE.

INTRODUCTION

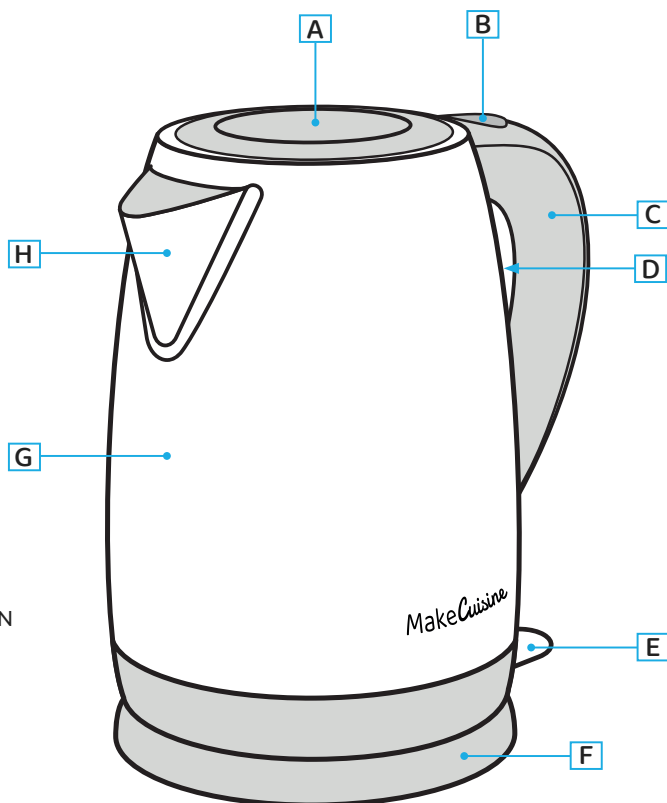

- A** LID
- B** LID RELEASE BUTTON
- C** HANDLE
- D** WATER GAUGE
- E** SWITCH ON - OFF
- F** BASE
- G** KETTLE BODY
- H** SPOUT

INTRODUCTION

- High-quality temperature controller uses food-grade materials that ensure the safe and healthy use of our products.
- It has a triple safety protection device. The temperature controller is more accurate, the use is safer and the service life is longer.
- Kettle body is cordless with 360-degree swivel base to ensure proper positioning and easy to use.
- Concealed heating element with high thermal efficiency, long service life and easy to clean.
- The body of the kettle is made of stainless steel, a noble material that will ensure a healthy and long-lasting use of the kettle.
- Fast boiling in 5-8 minutes after filling with water.
- Check the water level at a glance thanks to the water level gauge.
- Indicator light automatically shuts off together with the kettle when boiling temperature is reached.

INSTRUCTIONS FOR USE

1. Before using this product, be sure to read this manual carefully, especially the **Safety WARNINGS**.

2. Open the kettle lid, add water and replace the lid.

To avoid steam burns after boiling, the water level should not be lower than the lowest line or higher than the highest mark on the water level indicator. Connect the power plug, then place the kettle on the base and finally press the switch.

Remember NOT to turn on the switch before placing the kettle on the base.

3. The kettle will automatically turn off when the water is boiling.

4. When pouring the water, wait a moment until the water stops boiling.

5. If the kettle shuts off automatically before boiling, this indicates that there is too much limescale in the kettle. Clean the limescale to solve the problem.

6. To avoid possible unpleasant odors, fill the kettle with water up to the maximum level and then empty it after boiling. Repeat this action once more and clean the inside of the kettle until the odor is eliminated.

CLEANING INSTRUCTIONS

- Disconnect the plug and allow the kettle to cool down before cleaning.
- Do not immerse the kettle, power cord, plug and socket in water.
- Make sure the power line circuit is dry.
- Clean the kettle body with a damp cloth. Please do not use scouring soap or cleaning agents, as they will damage the surface characteristics of the kettle.

HOW TO REMOVE LIMESCALE

To keep the kettle in good working order, it is necessary to remove limescale frequently. If the equipment shuts itself off before the water has finished boiling, it is because there is too much limescale, so it is necessary to clean it.

Use white vinegar or non-aggressive powder products for limescale removal. When in doubt, vinegar is preferable to powdered cleaners.

You can do this with either of the two methods explained below:

Method 1. Add 1/2 liter of 8 proof white wine vinegar to the kettle. Let it act for 15 minutes. Then bring it to a boil and when it stops let it work for an hour. Then drain the vinegar, rinse it well with clean water repeatedly until the odor is gone and let it dry.

Method 2. Add 1/2 liter of water to the kettle and bring it to a boil, when it stops add 25 grams of citric acid and let it act for 15 minutes. Then rinse it well with clean water repeatedly and let it dry.

TECHNICAL SPECIFICATIONS

Voltage/Frequency	220~240V / 50-60Hz
Power	2200W
Capacity	1.7L

TROUBLESHOOTING

Trouble	Possible causes and solutions
Kettle shuts off before water starts boiling	<ol style="list-style-type: none"> 1. This is usually due to scale buildup, Clean the scale to solve it. 2. It may also be due to using other types of liquids in the kettle, or not having enough water in the kettle, which causes the minimum water level protection device to trip. Follow these steps: Add cold water until it exceeds the minimum level of the water level indicator and place the kettle on the base. The dry-run protection device will reset itself after 2 minutes and the kettle will start up.
Kettle does not work	<ol style="list-style-type: none"> 1. Check if the plug and socket connection are OK. Check that the wall socket has power. 2. If the power cord is broken or damaged, you must use the same type of power cord replaced by the official technical support. Do not use the device in this condition. 3. If the kettle does not have enough water, it incorporates a protection system that prevents it from being damaged. You will need to add more water before you can use it.
There is a peculiar little odor in the water.	<ol style="list-style-type: none"> 1. This phenomenon usually occurs when the kettle is used for the first time. You can solve this problem by following the instructions in point 6 of the section "Instructions for use". 2. If this problem persists, add water to the kettle to the maximum setting, add two tablespoons of potassium bicarbonate to the water and then drain the water after boiling.
Dirt in the water or limescale deposits in the kettle.	<p>If the water in your area is hard/very hard, the fouling is due to calcium carbonate and magnesium carbonate residues in the water, which are deposited during boiling.</p> <p>Simply clean scale more often, renew water more often, or use bottled water.</p>

AFTER SALES SUPPORT

Do you need help on any matter related to your *MakeCuisine* product?

Send an email: customerservice@makecuisine.com



Product Performance



Ordering in our Online Store



Technical Service and Extended Warranty

WARRANTY

- The household appliance covered by this warranty has been manufactured in accordance with the standard quality norms, having passed the corresponding homologation tests.
- The appliance is covered by a legal warranty of 2 years from delivery. In case of breakdown or manufacturing defect during this period, you may exercise, under the conditions and deadlines set by the Law of Guarantees in the Sale of Consumer Goods, the right to repair or replace the device. For this purpose, the invoice or proof of delivery of the appliance must be kept. In any case, the terms and rights referred to in this section shall be governed by the applicable legislation in force at any given time.
- The replacement of the appliance or any part thereof due to failure does not imply an extension of the warranty.
- If you use this home appliance for professional use, or in an unusual environment, the warranty for this appliance will be void.
- In case of supply under a specific agreement, the warranty shall be applied on the basis of the main contract.
- This warranty cannot be reissued.
- Damages caused to the equipment as a result of misuse or mishandling are excluded.
- Also excluded from the warranty are failures caused by catastrophic causes (fire, floods, etc.), atmospheric causes, blows and falls.

CAUTION

The manufacturer and seller expressly disclaim all liability for personal injury, property damage or loss, whether direct, indirect or incidental, resulting from improper connection, misuse, improper maintenance or neglect of this product.



The symbol of the container with the cross on the appliance means that when the appliance reaches the end of its useful life it must be taken to the collection centers provided, and that its treatment must be separate from that of urban waste.



CE Conformity

This product has been produced in accordance with current regulations and has been built to the latest safety standards.

The CE mark certifies that this product complies with all related regulations.

- EMC Electromagnetic Compatibility Directive EMC 2014/30/EU

- Low Voltage Directive LVD 2014/35/EU

- RoHS Directive 2011/65/EU



Make*Cuisine*

sales@makecuisine.com

www.makecuisine.com