


Make*Cuisine*

Inspire

C O L L E C T I O N

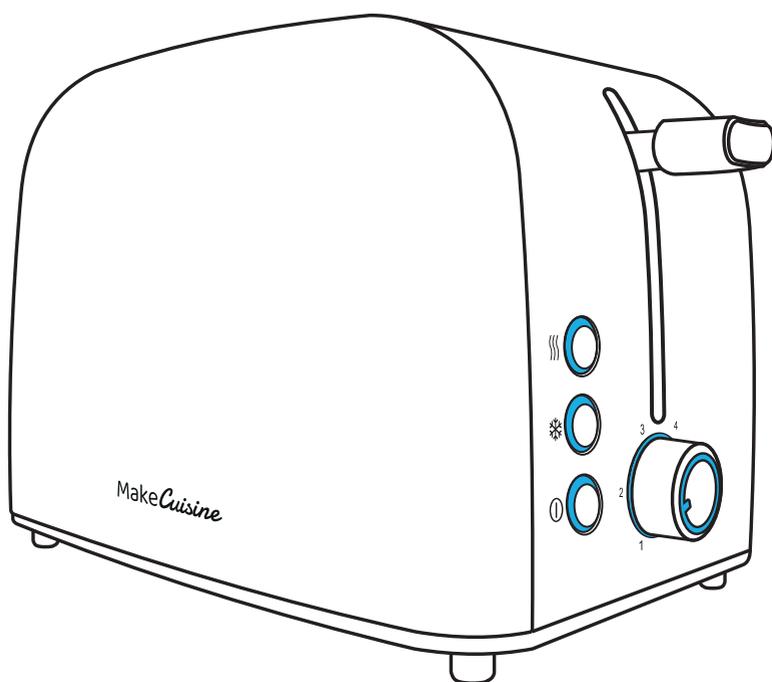

User's manual

Version 1.0

---

**2 SLICE TOASTER | LOFT**

## ! IMPORTANT SAFEGUARDS

Your toaster is electrically powered. You should always follow basic safety precautions when using your toaster.

**PLEASE READ CAREFULLY AND UNDERSTAND THESE INSTRUCTIONS.  
ALWAYS TAKE CARE FOR YOUR SAFETY WHEN USING ANY APPLIANCE.**

- Check that the mains voltage corresponds to the specifications of the toaster before starting it up. If it is not correct, do not use the toaster and contact the supplier of the toaster.
- Do not touch freshly toasted bread or the top of the toaster with your hands. Use gloves or tongs.
- To avoid risk of electric shock, do not immerse or allow water or other liquids to enter the cords, plug or toaster.
- Do not leave the toaster unattended while in operation.
- Unplug from outlet when not in use or before cleaning.
- Allow to cool before handling.
- Do not use the appliance if it is damaged or if the cord or plug is broken or frayed.
- If the power cord or toaster is damaged, it must be repaired or replaced.

Do not use the toaster in this condition.

- The use of accessories other than those supplied with the equipment and not authorized by the manufacturer may cause injury.
- Do not use the toaster outdoors.
- Do not allow the cord to hang over the edge of a table or come in contact with hot surfaces. Also, do not place the cord or any other object over the bread slots while the toaster is operating.
- To turn off the toaster, unplug the power cord from the electrical outlet.
- Do not unplug the toaster by pulling on the cord, disconnect the plug from the wall socket with your hands.
- When using the toaster for the first time, some smoke may come out at first. This is normal.
- This appliance reaches very high temperatures, especially in the upper area, where the bread slots are located. This is why we must be especially careful with these areas so as not to get burned.
- Bread may burn if the toasting time is excessive. Therefore, this appliance should not be used near or under curtains and other combustible materials.

## ! IMPORTANT SAFEGUARDS

- The lever must be in the “UP” position before connecting or disconnecting the plug from the wall outlet.
- Do not insert metal objects or other utensils into the toaster, as this may cause an electric shock or fire.
- Due to hot parts and potential hazards, the appliance is not suitable for use by children under 8 years old.

When switched off, keep the device and the power cord out of the reach of children.

Children over 8 years old must be supervised by an adult at all times when using or cleaning the appliance. This appliance is not a toy!

- The toaster is not designed for use with an external timer or stand-alone remote control system.
- Detailed information on how to clean the toaster can be found in the section “Cleaning instructions”.
- This appliance is designed for domestic use only, for example:
  - Private apartments, houses and villas.
  - Staff kitchen areas for retail, office and other work environments.
  - Use by customers in hotels, motels or residential-type settings.
  - Bed & Breakfast type hostels.
- This appliance **MUST NOT** be used in industrial and/or professional environments, such as Bars, Restaurants, etc. Use in such environments will void the warranty.
- No liability will be accepted for damage caused by non-compliance with these instructions or by improper use of the toaster.




Please keep the instructions for future reference.

## CONTENTS


- INTRODUCTION
- INSTRUCTIONS FOR USE
- ACCESSORY FOR HEATING BUNS
- CLEANING INSTRUCTIONS
- TECHNICAL SPECIFICATIONS
- REUSABLE TOASTER BAG
- TROUBLESHOOTING

**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE APPLIANCE.**

## INTRODUCTION

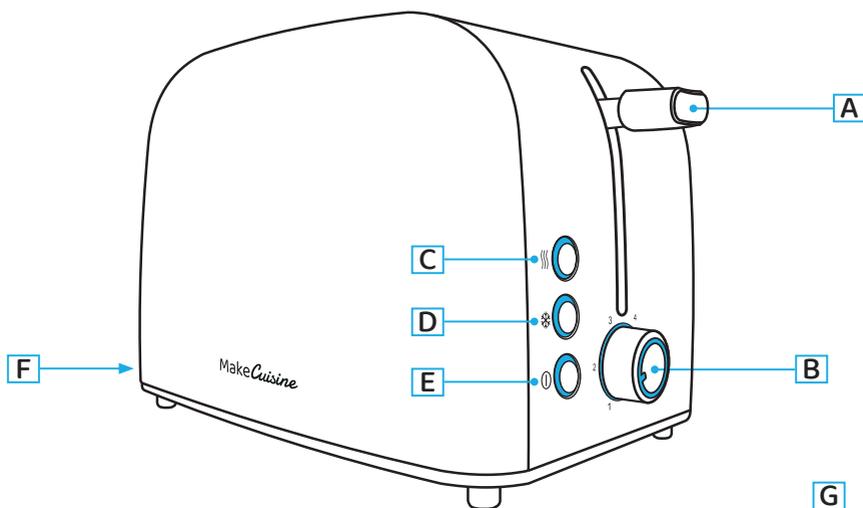

- A** LOADING LEVER
- B** BROWNING CONTROL
- C** REHEAT BUTTON
- D** DEFROST BUTTON
- E** CANCEL BUTTON
- F** REMOVABLE CRUMBS TRAY
- G** BUN HEATER

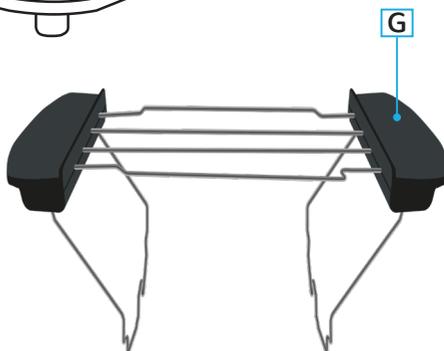

## INSTRUCTIONS FOR USE

- **The bread can be toasted in the following way:**

Connect the toaster plug to the power supply, insert the slices of bread to be toasted into the toasting slots, adjust the browning control and start the toaster by lowering the loading lever. At the end of the selected time the lever will automatically move to the upper position and the toaster will stop, then you can remove the toast. If you wish to stop the process at any time, simply press CANCEL button.

**NOTE:** When using the toaster for the first time, some smoke may come out.

This is normal and will stop after a few minutes.

- **Use the “Accessory for heating buns or pastries”:**

You can use this accessory to heat buns, sandwiches, pastries, bagels, etc., in short, it can be very useful for ingredients that do not fit in the toaster slots or that could get stuck in the slots.

Simply place the accessory on top of the toaster, place the bun or bagel, pastry on top, adjust the toasting control and press the loading lever down to start the toaster.

Check the time and turn the bun so that it is evenly toasted on both sides. If necessary, repeat the process again until you find the right toasting level.

- CANCEL button will automatically light up when the toaster is turned on.
- CANCEL button is used to immediately stop toasting. When operated, the loading lever will automatically return to the upper position and the toast can be removed.
- REHEAT button will automatically light up when the button is pressed.
- REHEAT button is used to reheat a previously toasted piece of bread.
- DEFROST button will automatically light up when the button is pressed.
- DEFROST button is used to toast bread fresh from the freezer.
- Start-up: Adjust the adjustable browning control. Place the slices to be toasted in the slots and push the loading lever down. When the toasting time is over, the loading lever

## INSTRUCTIONS FOR USE



will move to the upper position and the toaster will stop heating and go into standby mode, then we can remove the toasted bread.

- Test until you find the browning level you are most satisfied with. The optimum toasting time depends on the type of bread and the bread freshness.
- Do not use a knife, fork or other utensil to remove the bread or to clean the toaster. If the bread becomes stuck, unplug the toaster before attempting to remove it.
- The top of the toaster gets very hot because the metal conducts heat very well and the hot air also tends to rise vertically. Therefore, do not touch the outside of the toaster during operation and keep it out of reach of children.

## ACCESSORY FOR HEATING BUNS

You will receive the accessory for warming buns, bagels, pastries, folded up. To assemble, unfold the legs of the accessory by pulling them upwards, they automatically snap into the plastic holders and the accessory is ready to be placed on top of the toaster slots.

To refold the accessory, press the sides of the legs outwards so that the legs disengage from their recesses and tilt them towards the center to fold them down, thus folding the accessory for easy storage.

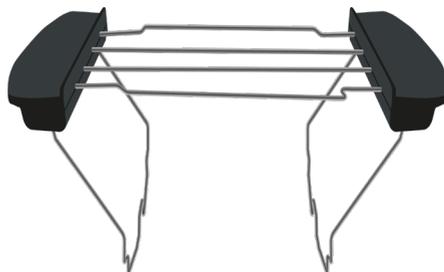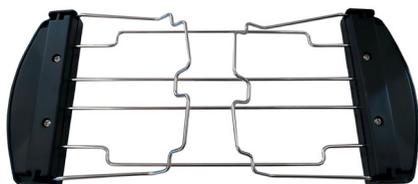

## CLEANING INSTRUCTIONS

- Turn off and unplug the toaster from the electrical outlet.
- Allow to cool completely before cleaning.
- Clean the outside of the toaster and the cable with a soft, damp cloth.
- Do not use abrasive or harsh household cleaners as they may damage the appliance or cosmetically damage the toaster.
- Occasionally clean the crumbs tray.
- Crumbs can be removed from the tray with a small brush or cloth.
- Place the crumbs tray back in its cradle by sliding it back into the cradle and making sure it clicks into its interlock.
- Do not attempt to clean the inside of the toaster, as this may damage the heating elements. If present, you can remove small pieces of bread from inside the toaster by simply turning it upside down.
- Do not allow water or other liquids to enter the toaster.

## TECHNICAL SPECIFICATIONS

Voltage / Frequency	220~240V / 50~60Hz
Power	900 W

## REUSABLE TOASTER BAG



Together with your toaster you will find a reusable toaster bag as a gift, you can use it to make hot sandwiches, pizza slices, pastries, etc. in your toaster. It is a practical and very convenient solution as you will not dirty or have to clean frying pans or sandwich makers.

## REUSABLE TOASTER BAG

### Instructions

- Make your sandwich as you normally do.
- Insert the sandwich in the toaster bag.
- Place the bag with the sandwich in one of the toaster slots with the opening facing upwards, if the bag does not fit properly, you can help by pushing it downwards with your hands.
- Select the Browning Control to position 2 or 3 (depending on whether you prefer it more or less toasted) and operate the loading lever.
- In just a few minutes you will have a perfect sandwich.
- Toaster bags are reusable and can be cleaned with hot soapy water or in the dishwasher by inserting the bag upside down into the dish racks.

### **!** IMPORTANT

- Caution! The toaster bag becomes hot during use.
- Allow to cool before removing from the toaster.
- Never heat liquids in the toaster bag.
- Never use a broken or torn toaster bag.
- Wash the toaster bag thoroughly after use, so it is ready for the next use.



We have PACKS of reusable toaster bags for sale.  
Ask an authorized MakeCuisine dealer for more information.

## AFTER SALES SUPPORT

Do you need help with any matter related to your product *MakeCuisine?*

Send an email: [customerservice@makecuisine.com](mailto:customerservice@makecuisine.com)



Product Performance



Orders in our Online Store



Technical Service and Warranty Extension

## WARRANTY

- The appliance for domestic use covered by this warranty has been manufactured in accordance with standard quality standards, having passed the corresponding approval tests.
- The appliance has a legal warranty of 2 years from its delivery. In the event of a breakdown or manufacturing defect during said period, you may exercise, under the conditions and deadlines set for it by the Warranty laws in the sale of consumer goods in your country, the right to repair or replace the device. For this you must keep the invoice or proof of delivery of the device. In any case, the terms and rights referred to in this section will be regulated by the current legislation applicable at all times in your country.
- Replacement due to failure of the device or any part of it will not imply an extension of the warranty.
- If you use this home appliance for professional use, or in an unusual environment, the warranty period will be shortened to 50%.
- In case of supply through a specific agreement, the warranty will be applied based on the main contract.
- This warranty cannot be reissued.
- Failures produced in the appliance as a result of misuse or poor treatment are excluded.
- Faults caused by catastrophic causes (fire, floods ...), atmospheric, blows and falls are also excluded from the warranty .

### CAUTION

The manufacturer and seller expressly disclaim all liability for personal injury, property damage, or loss, whether direct, indirect, or incidental, as a result of improper connection, misuse, improper maintenance, or neglect of this product.



The symbol of the container with the cross, found on the appliance, means that when the appliance reaches the end of its useful life it must be taken to the designated collection centers, and its treatment must be separate from that of urban waste.



#### CE conformity

This product has been produced in accordance with current regulations and has been built with the latest safety standards.

The CE mark certifies that this product complies with all regulations related to it.

- Electromagnetic compatibility directive EMC 2014/30 / EU
- LVD Low Voltage Directive 2014/35 / EU
- RoHS Directive 2011/65 / EU



Make*Cuisine*

[sales@makecuisine.com](mailto:sales@makecuisine.com)

---

[www.makecuisine.com](http://www.makecuisine.com)